






Frame Assembly instructions

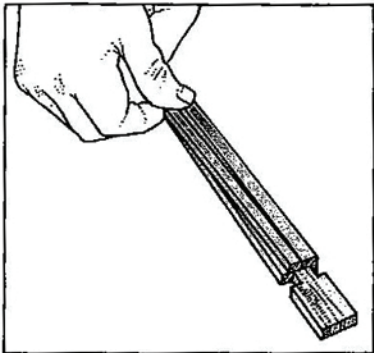


Start by prying the loose wood strip from the top bar.

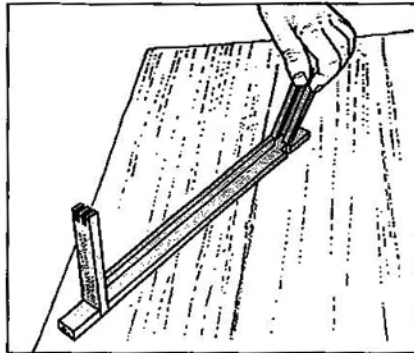


Use a mallet to tap the side bars home into the ends of the top bar.

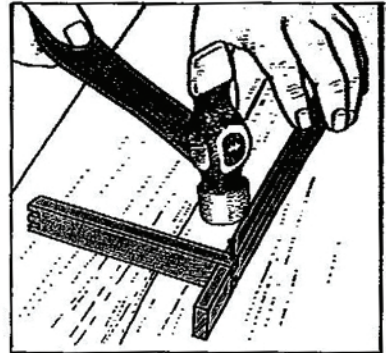


Hammer in gimp pins to hold the side bars in place on the top bar.

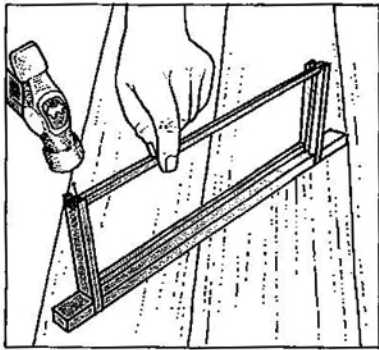


Carefully slot in the first bottom bar, and hammer in gimp pins as shown.

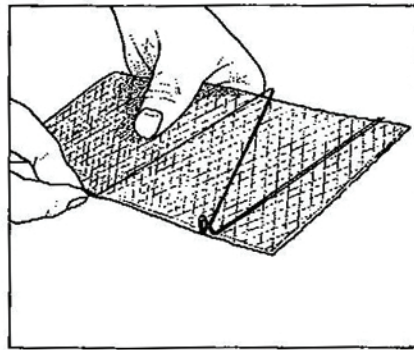


If the foundation is wired, bend up the three loops at 90 degrees.

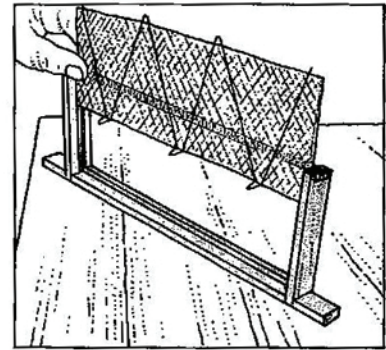


Very carefully slide in the wax foundation down onto the top bar.

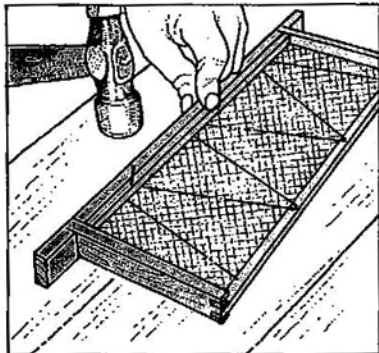

Insert the loose wood strip, hammer in gimp pins to diagonally to hold it.

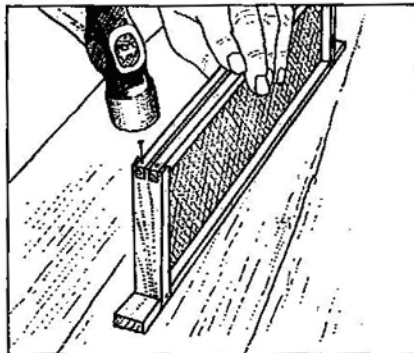

Finally put in the second bottom bar, and secure it with gimp pins.

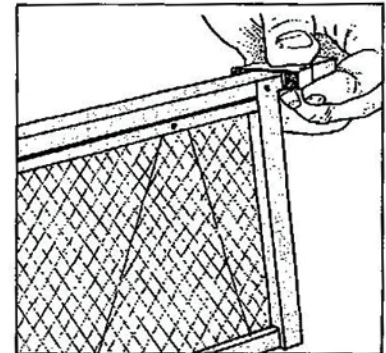

Metal ends must be added before using the frames.